




INSTRUCTION

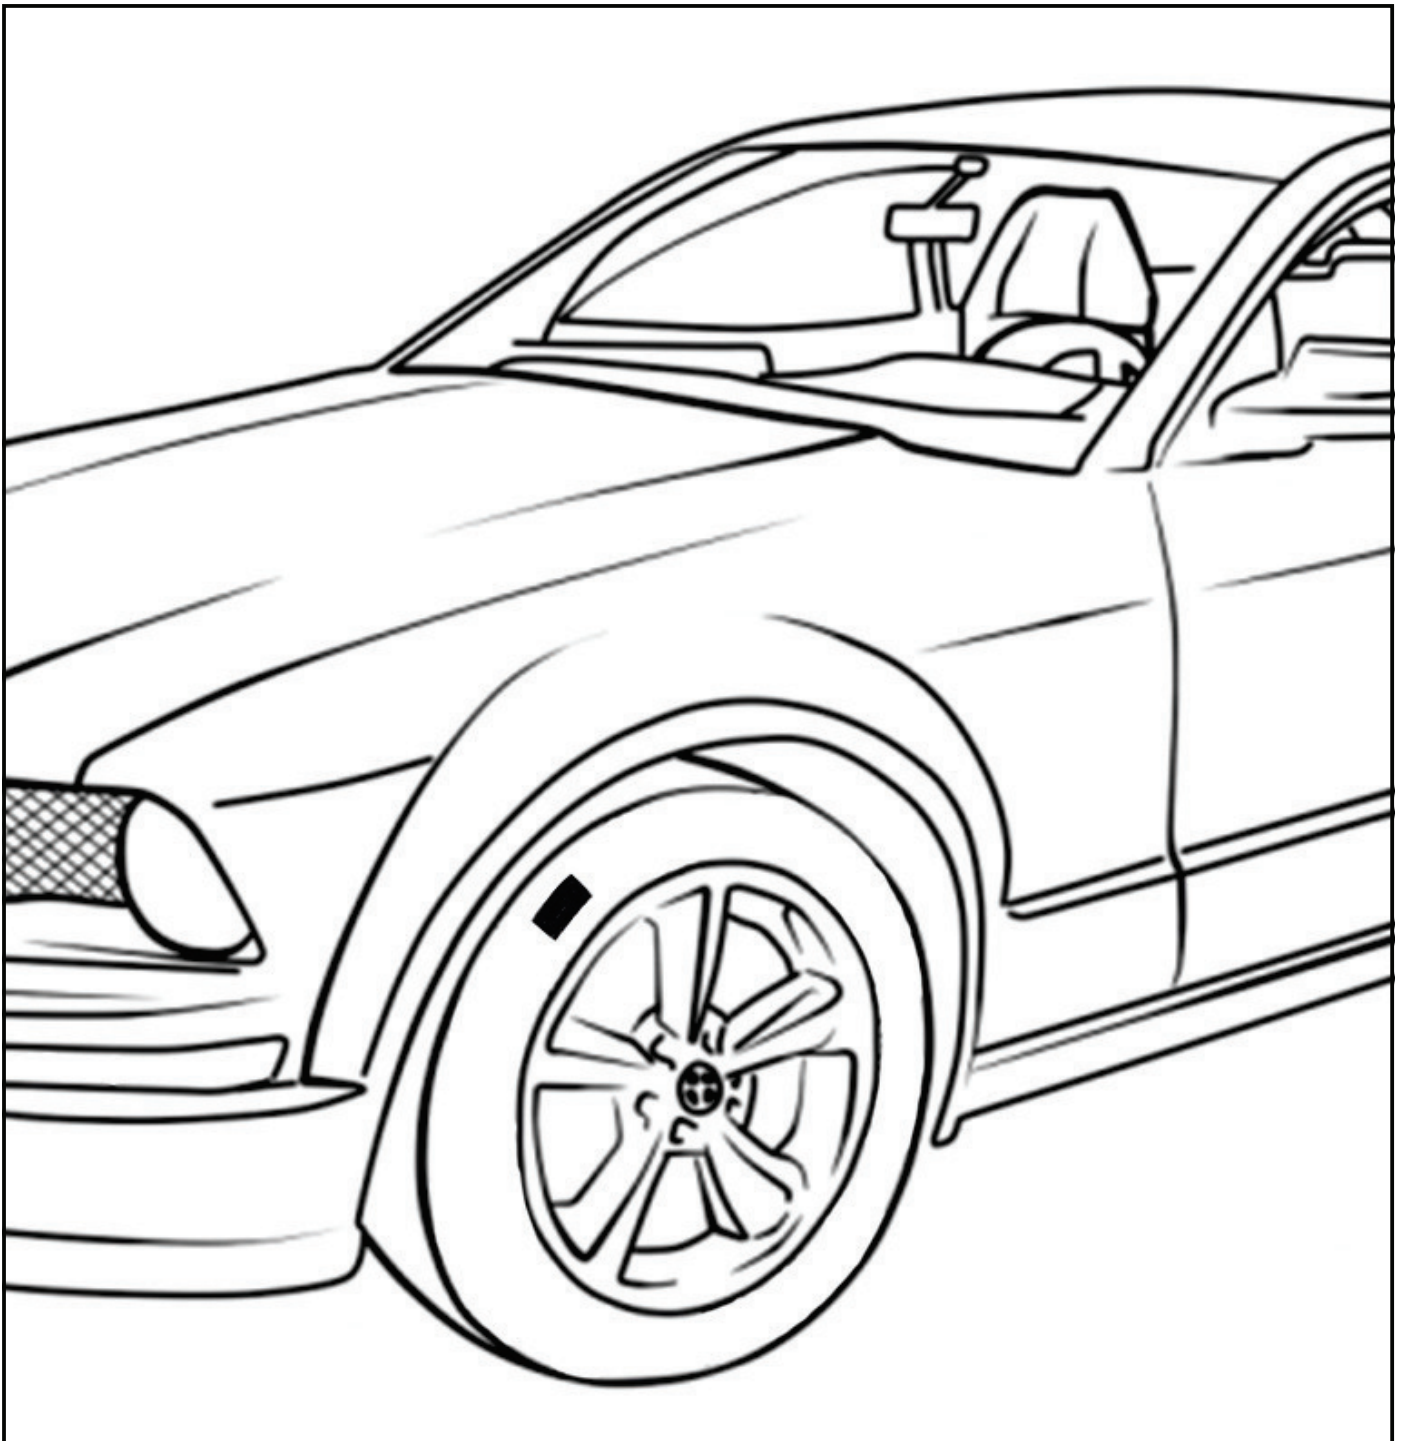


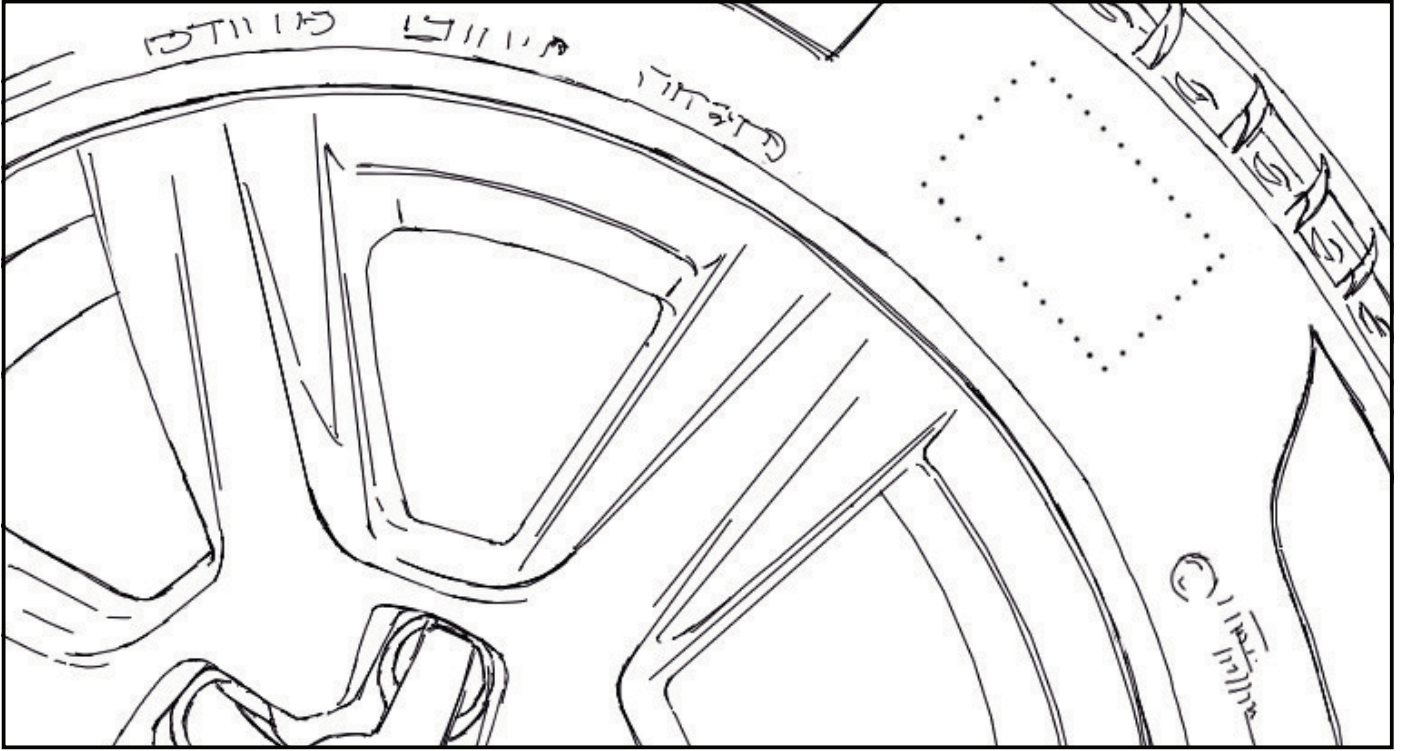


1 *Clean Flat site. Intermediate profile and rim.*

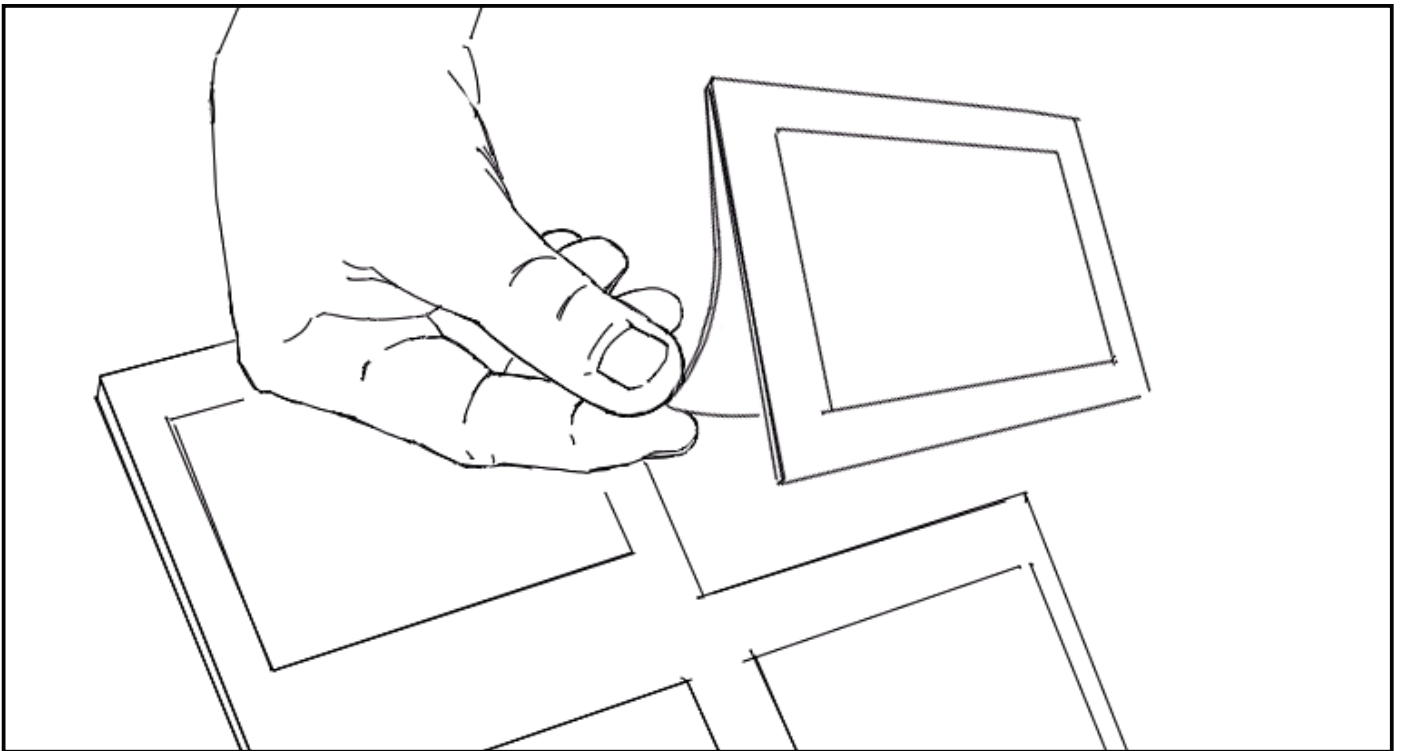


2 *Isolate the tattoos and pull off the back protector.*

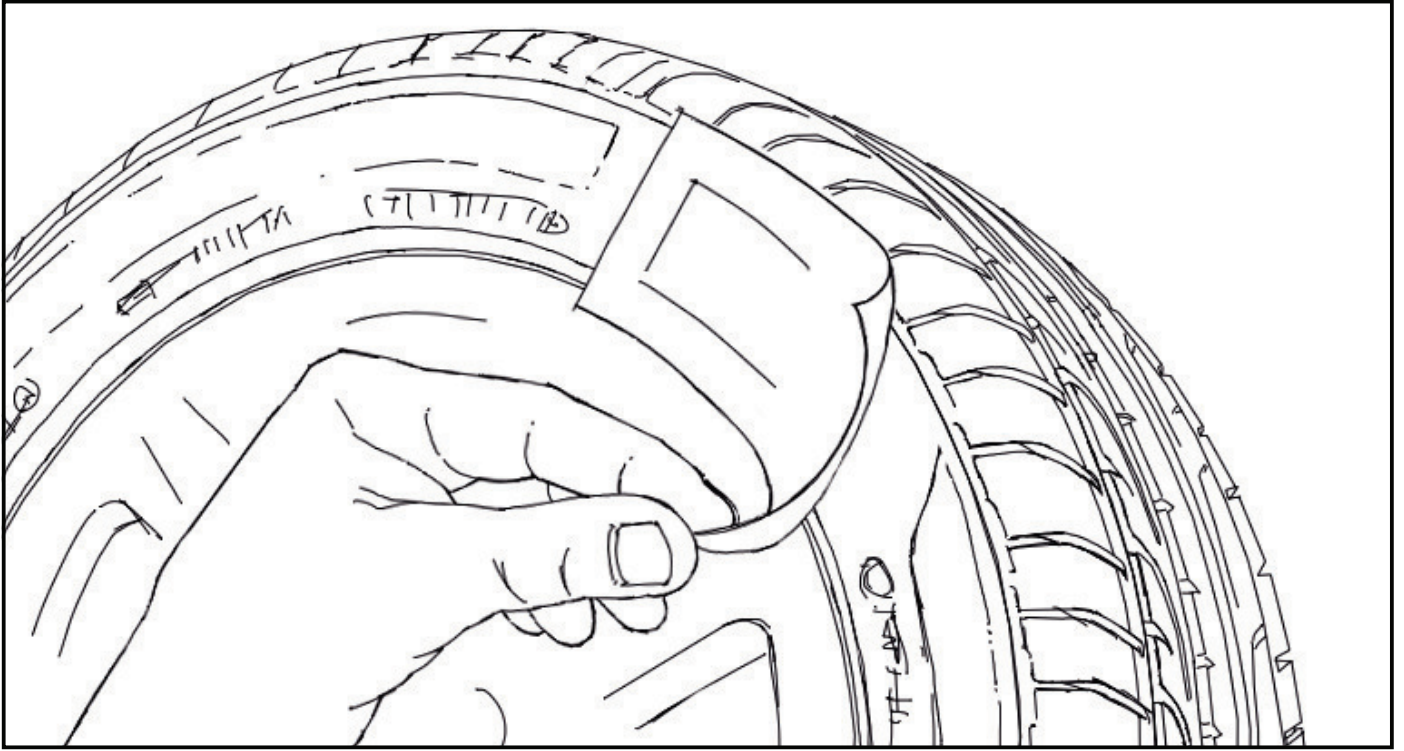


3 *Apply the tattoo with the backing paper on the cleaned spot.*

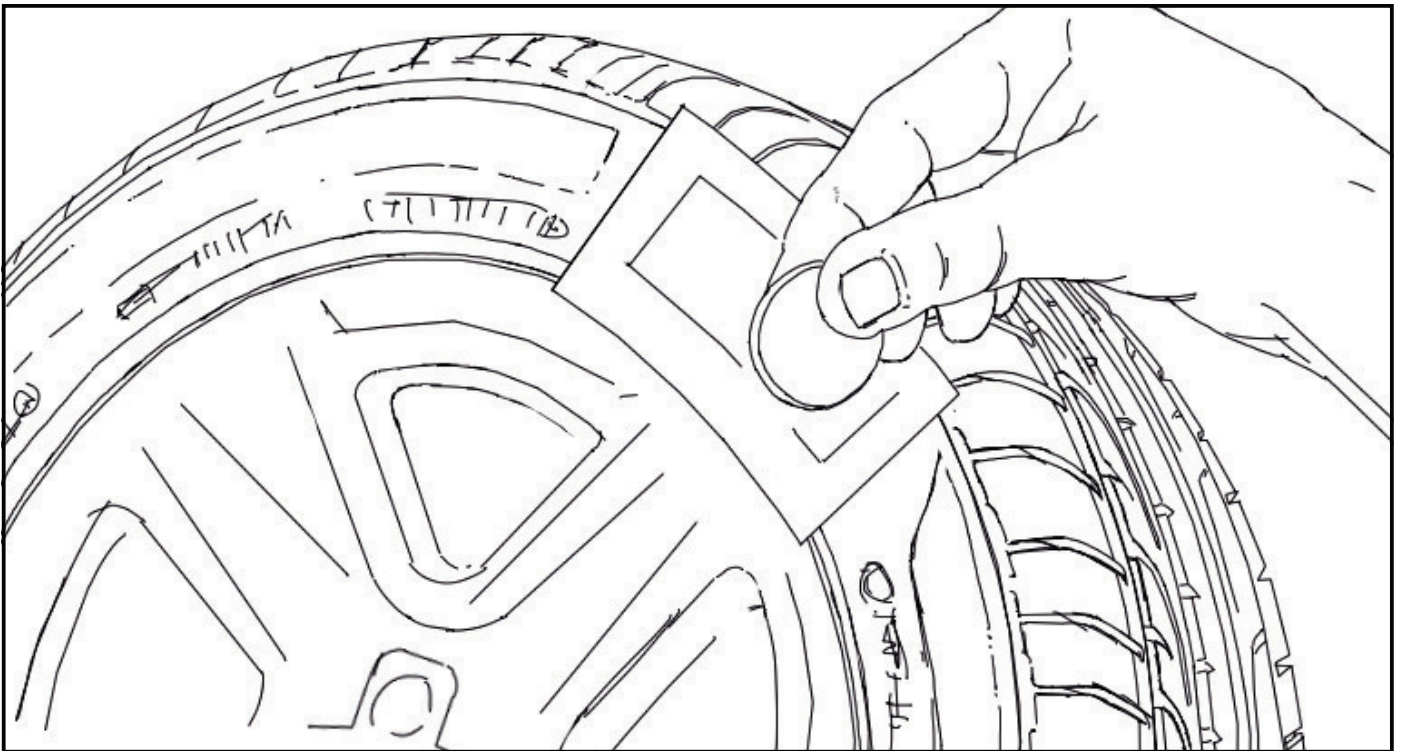

4 *Rub the tattoo with your fingernail or a coin.*

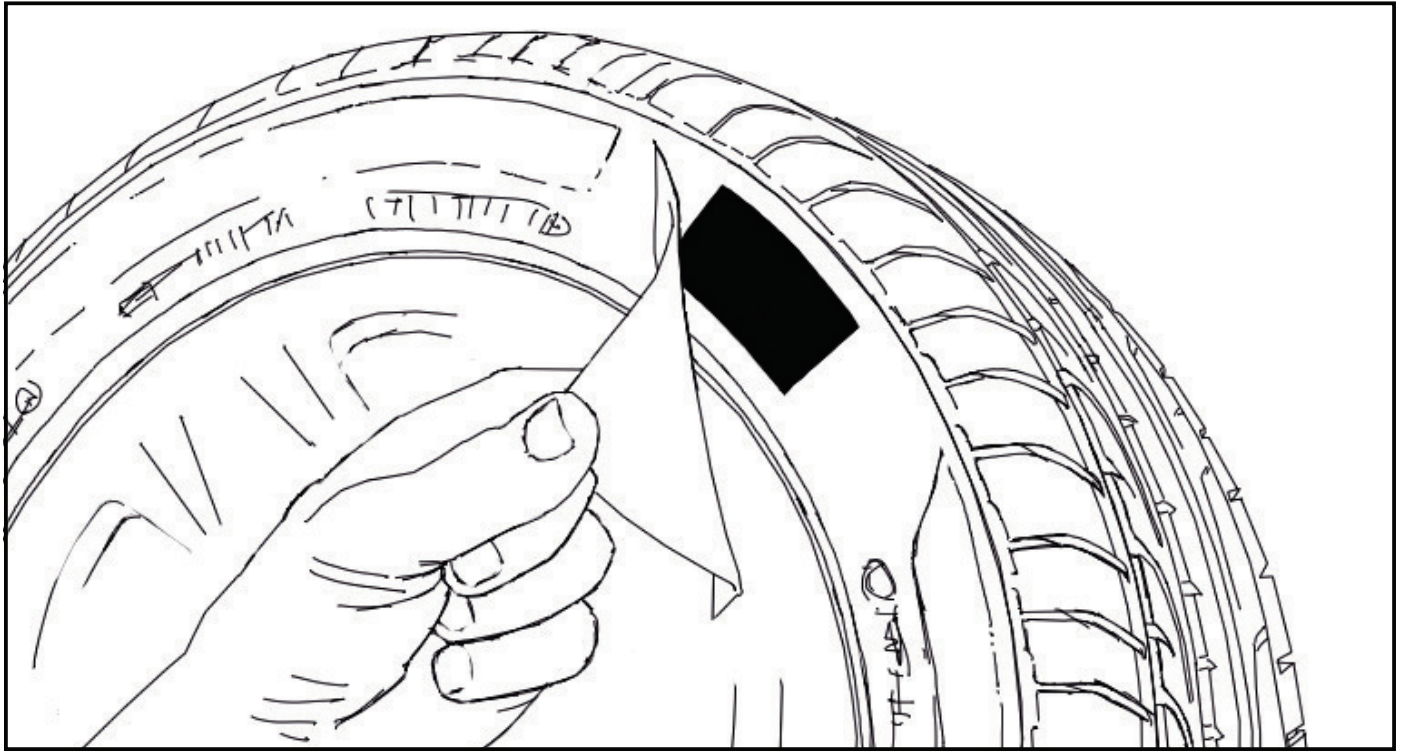

5 *Pull off the backing paper.*

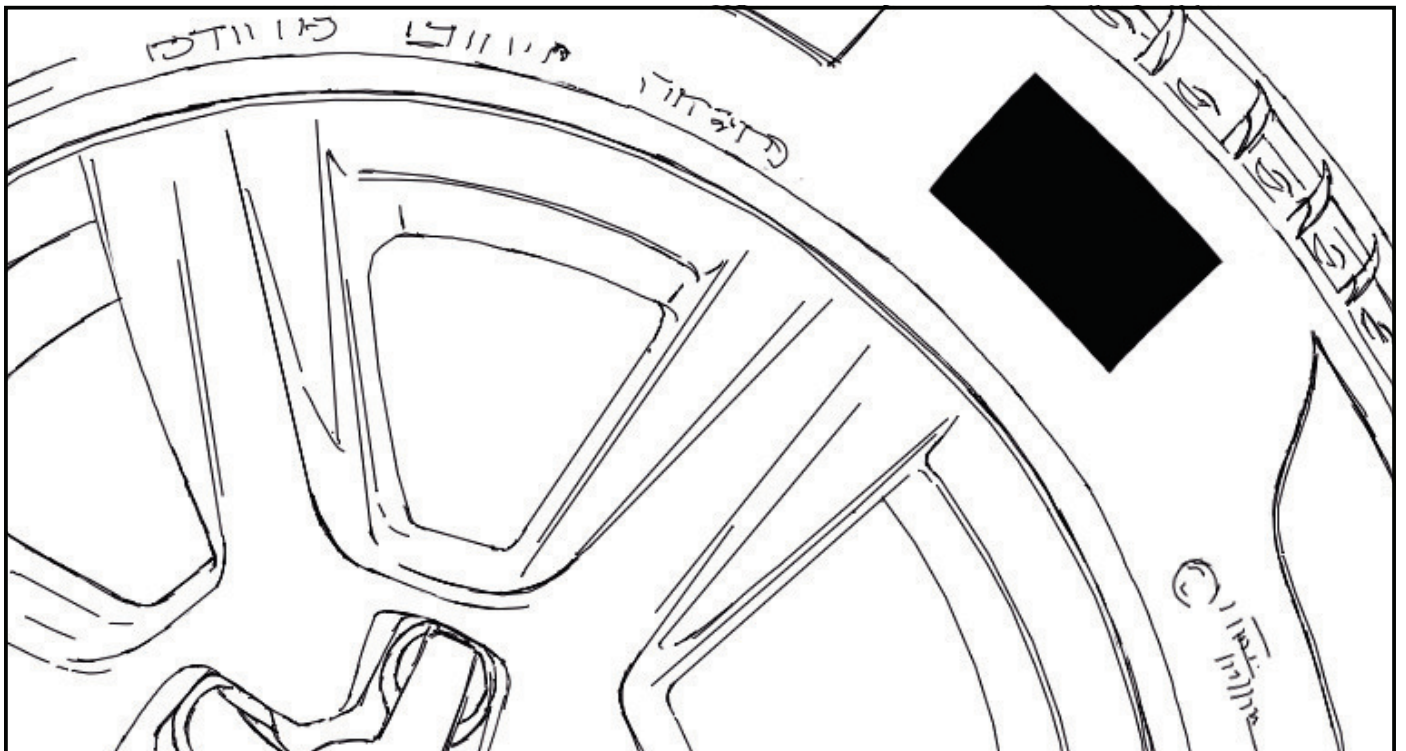

6 *Ready!*

© *Seri Plastica*